

# Video Brief # 1

Replacing Glass on a Door  
with Wood Mouldings

1 800.567.2931  
T 819.535.5588  
F 819.535.1104

**M**  
**Milette**  
*portes·doors*

www.portesmilette.com

## You will need :

- Sharpened utility knife or router
- Hammer
- Punch
- Finishing nails
- Wood putty
- # 320 fine sandpaper

## The steps:

The removal of only three mouldings is necessary to proceed to the glass replacement on a French door with wood mouldings. Replacement mouldings are available at Milette and can be shipped when you order a replacement glass with mouldings.


1. To figure out in which order you have to remove the mouldings, please refer to figure 1. Using a sharpened utility knife, apply a light pressure on the profile marking side rail, wood bar and/or rail until the junction (90-degree corner) is free and the moulding detaches itself. Make sure to carefully follow the profile (see figure 2).

**If you use a router,** trace the perimeter of the moulding at the junction of side rail, wood bar and/or rail. Make sure to get a right angle in corners by using a very sharp wood chisel or utility knife. Make sure to carefully follow the profile (see figure 2).

2. Remove the detached mouldings.
3. Replace the glass.
4. Put the mouldings back into place starting with the 90-degree cut mouldings (the shortest ones) to provide the necessary support to the mouldings cut in angle (see figure 3).
5. Fasten everything with finishing nails that you can put into place using a hammer and a punch to prevent damaging the wood (see figure 4).
6. Complete by applying wood putty to fill up the marks left by the nails and the joint between the new moulding and the side rail, wood bars and/or rails.
7. Lightly sand using #320 fine sandpaper and treat with appropriate product.


**FIGURE 1**

Make sure you remove the mouldings in the right order

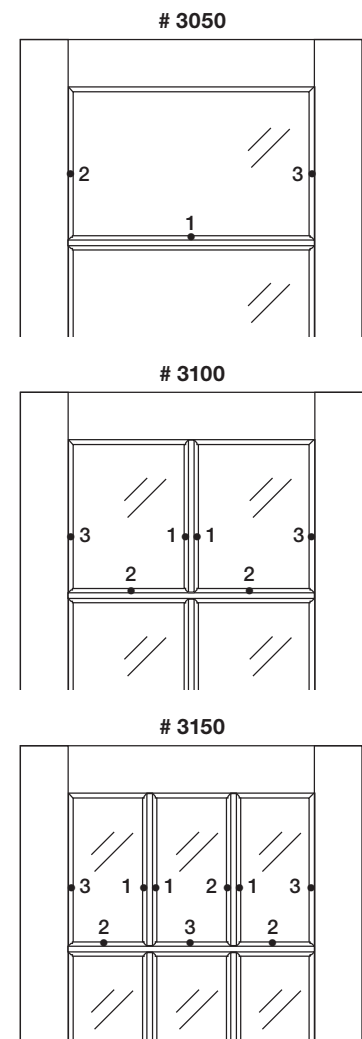

**FIGURE 2**

Grey parts are the ones you have to remove

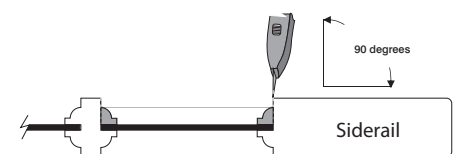

# Video Brief # 1

Replacing Glass on a Door  
with Wood Mouldings

1 800.567.2931  
T 819.535.5588  
F 819.535.1104

**M**  
**Milette**  
*portes·doors*

www.portesmilette.com

## \*\*\* Model “C” or “S” door

Make sure to order the glass corresponding to the defective one. Patterned glass are not reversible and can thus only be used on the side of the door for which they were cut (right – center or left side of the profile facing the textured side of glass).

Complete all preceding steps by making sure not to remove the head moulding (the one shaped like a “C” or “S”), since there is no replacement moulding shaped like a “C” or “S”.

FIGURE 3

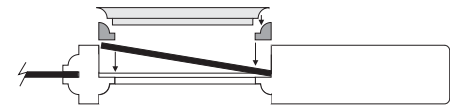


FIGURE 4

